




Caratteristiche - Features

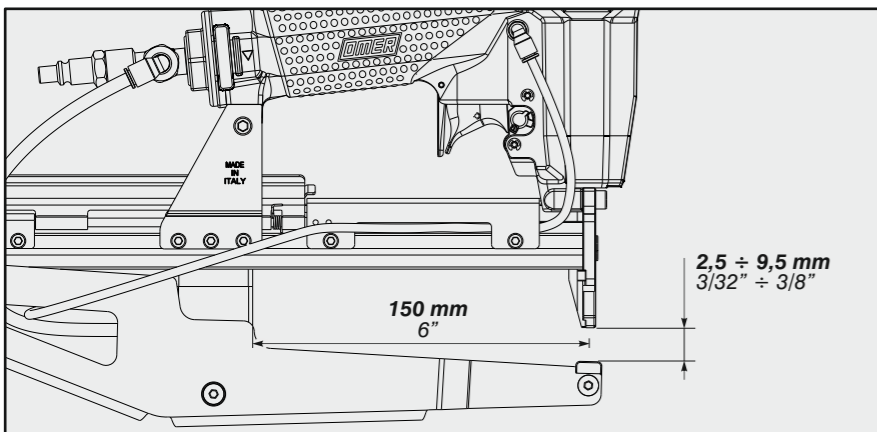

Posizione in sicura
Safety position



Pronta a sparare
Ready to fire

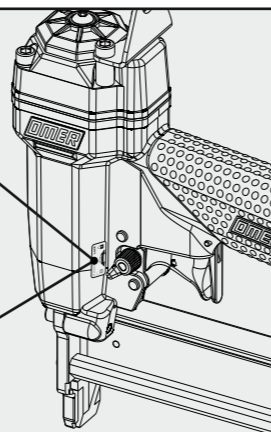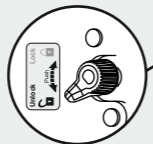

Manuale d'uso, manutenzione e parti di ricambio
Use, maintenance and spare parts manual
Gebrauchsanweisung, Instandhaltungsrichtlinien und Ersatzteile
Manuel d'utilisation, entretien et pièces de rechange
Manual de uso, mantenimiento y repuestos
Εγχειρίδιο χρήσης, συντήρησης και ανταλλακτικών
Manual de utilização, manutenção e partes sobresselentes
Handleiding voor gebruik, onderhoud en reservedeelslste
Brugsanvisning, vedligeholdelse og reservedeelslste

Parte 2
Part 2
Teil 2
Partie 2
Part 2
2° Μερὸς
Parte 2
Deel 2
Del 2



Caricamento - Loading



1 - Arretrare lo Spingipunto e agganciarlo al finecorsa
cio farà aprire il carter mobile
Pull the pusher backwards and lock it at the stop position
at the rear of the tool, this will open the movable hold down

2 - Inserire le graffe
Load the magazine with Staple






3 - Rilasciare lo Spingipunto
Release the the slider



Non azionare MAI il grilletto durante il caricamento o il disincapeamento della graffatrice.
NEVER actuate the trigger while loading or cleaning a jammed stapler.

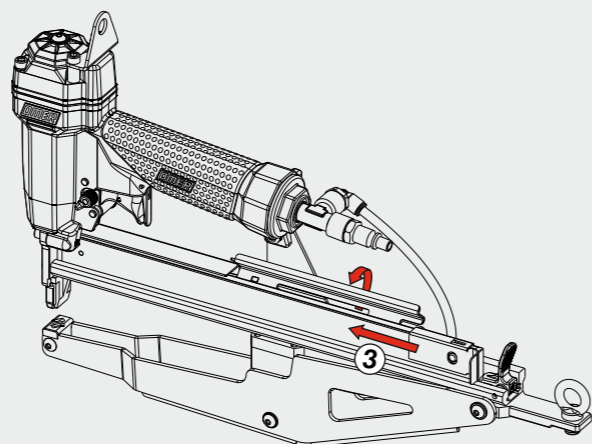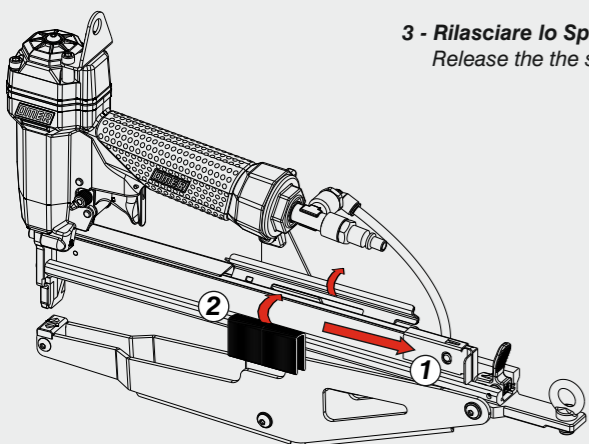

Disinceppamento macchina - Quick clearance jammed nails

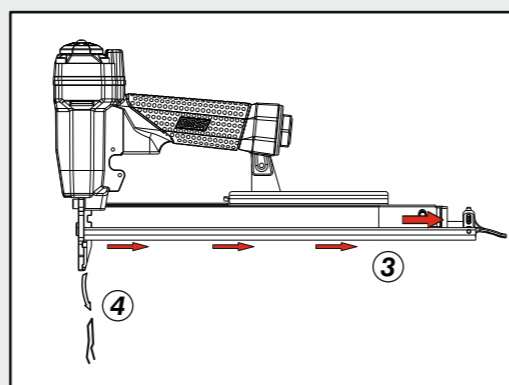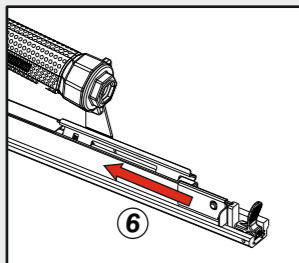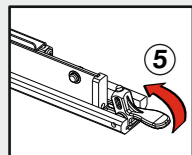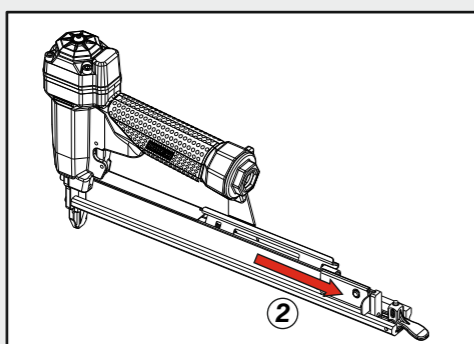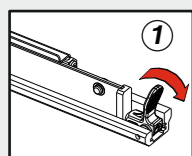

Dati tecnici

Technical data
Technische daten

Données techniques

Datos tècnicos
Τεχνικά χαρακτηριστικά

Dados tècnicos

Technischegegevens
Tehniske data

Misure impiegabili mm
Usable lengths mm
Gebrauchliche Längen mm

Mesures utilisables mm
Medidas que se pueden emplear mm
Διαστάσεις σε μμ

Medidas que se podem utilizar mm
Te gebruiken engtes in mm
Brugbare laengder i mm

9 ÷ 25

Capacità caricatore n° punti
Magazine capacity No. of fasteners
Magazinkapazität Nägel

Capacité chargeur n° de points
Capacidad cargador n° puntos
Δυνατότητα γεμιστέρα, σπινδύτερης

Capacitate carregador n° pontos
Capaciteit magazijn in aantal spijkers
Kapacitet af magasin antal klemme

210

Pressione d'esercizio
Working pressure
Betriebsdruck

Pression de fonctionnement
Presión de trabajo
Πίεση λειτουργίας ατμ.

Pressão de trabalho
Werkdruk
Arbejds tryk bar

5 ÷ 7,5 bar
70 ÷ 105 psi

Consumo aria litri/colpo
Air consumption litres/shot
Luftverbrauch Liter/Schlag

Consommation air litre/coup
Consumo aire-litros/golpe
Καταναλοση αερα λ/ξτῶπημα

Consumo ar litro/golpe
Luchtverbruik liter/schot
Luftforbrug liter/skud

0,39

Peso kg
Weight kg
Gewicht kg

Poids kg
Peso kg
Βαρος κγ

Peso kg
Gewicht in kg
Vaegt kg

2,80

Dimensioni (AxBxH) mm
Dimensions mm
Größe mm

Dimension mm
Dimensiones mm
Δυνατότητα γεμιστέρα, σπινδύτερης

Dimencoes mm
Afmetingen in mm
Dimensioner mm

428x50x272

EN 12549 :1999 ISO 11201 :1995

Pressione sonora in pos. operatore
Sound pressure at the workstation
Lärmintensität am Arbeitsplatz

Pression acoustique près de l'opérateur
Presión sonora en posición encargado
Ακουστική πίεση στη θέση χειριστού

Intensidade sonora perto do operador
Geluidssterkte op de werkplek
Lydstyrke på operatorposten

$L_{pA,1s}$
(Rif. 20μPa)

80,1 dB(A)

EN 12549 :1999 ISO 3744 :1994

Potenza sonora emessa
Emitted sound power
Ausgestrahlte Lärmintensität

Puissance acoustique émise
Potencia sonora emitida
Ακουστική ισχυ

Potência sonora emitida
Uitgestraalde geluidssterkte
Udsendt lydstryke

$L_{WA,1s}$
(Rif. 1pW)

86,9 dB(A)

EN 28662 :1992 ISO 5349 :1986 ISO 8662 -11

Valore medio ponderato di vibrazione sull'impugnatura
Weighted mean value of vibration on the grip
Mitteler Vibrationswert, am Griff
Gemessen

Valeur moyenne pondérée de vibration mesurée sur la poignée
Valor medio ponderado de vibracion medida en la empunadura
Μεσος ορος μετρησης κραδασμων στη χειρολαβη


Valor medio ponderado de vibracao medida no punho
Gewogen gemiddelde vibratiewaarde
Middelvaardi af vibrationer pa handtaget

<2,5 m/s²

Tipo di punto
Type of fastener
Befestigungselement
Type d'agrafe
Tipo de punto
Τυπος κάρφιου
Tipo de ponto
Type nietjes
Tilspændingstype

SG44


1,00x1,25

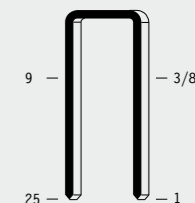


7,8

Gauge: 18
Crown: .387" (3/8")

Parti di ricambio - Spare parts - Ersatzteile - Pièces de rechange - Piezas de repuesto
Ανταλλακτικά - Partes sobresselentes - Tabel te raadplegen - Reservedede

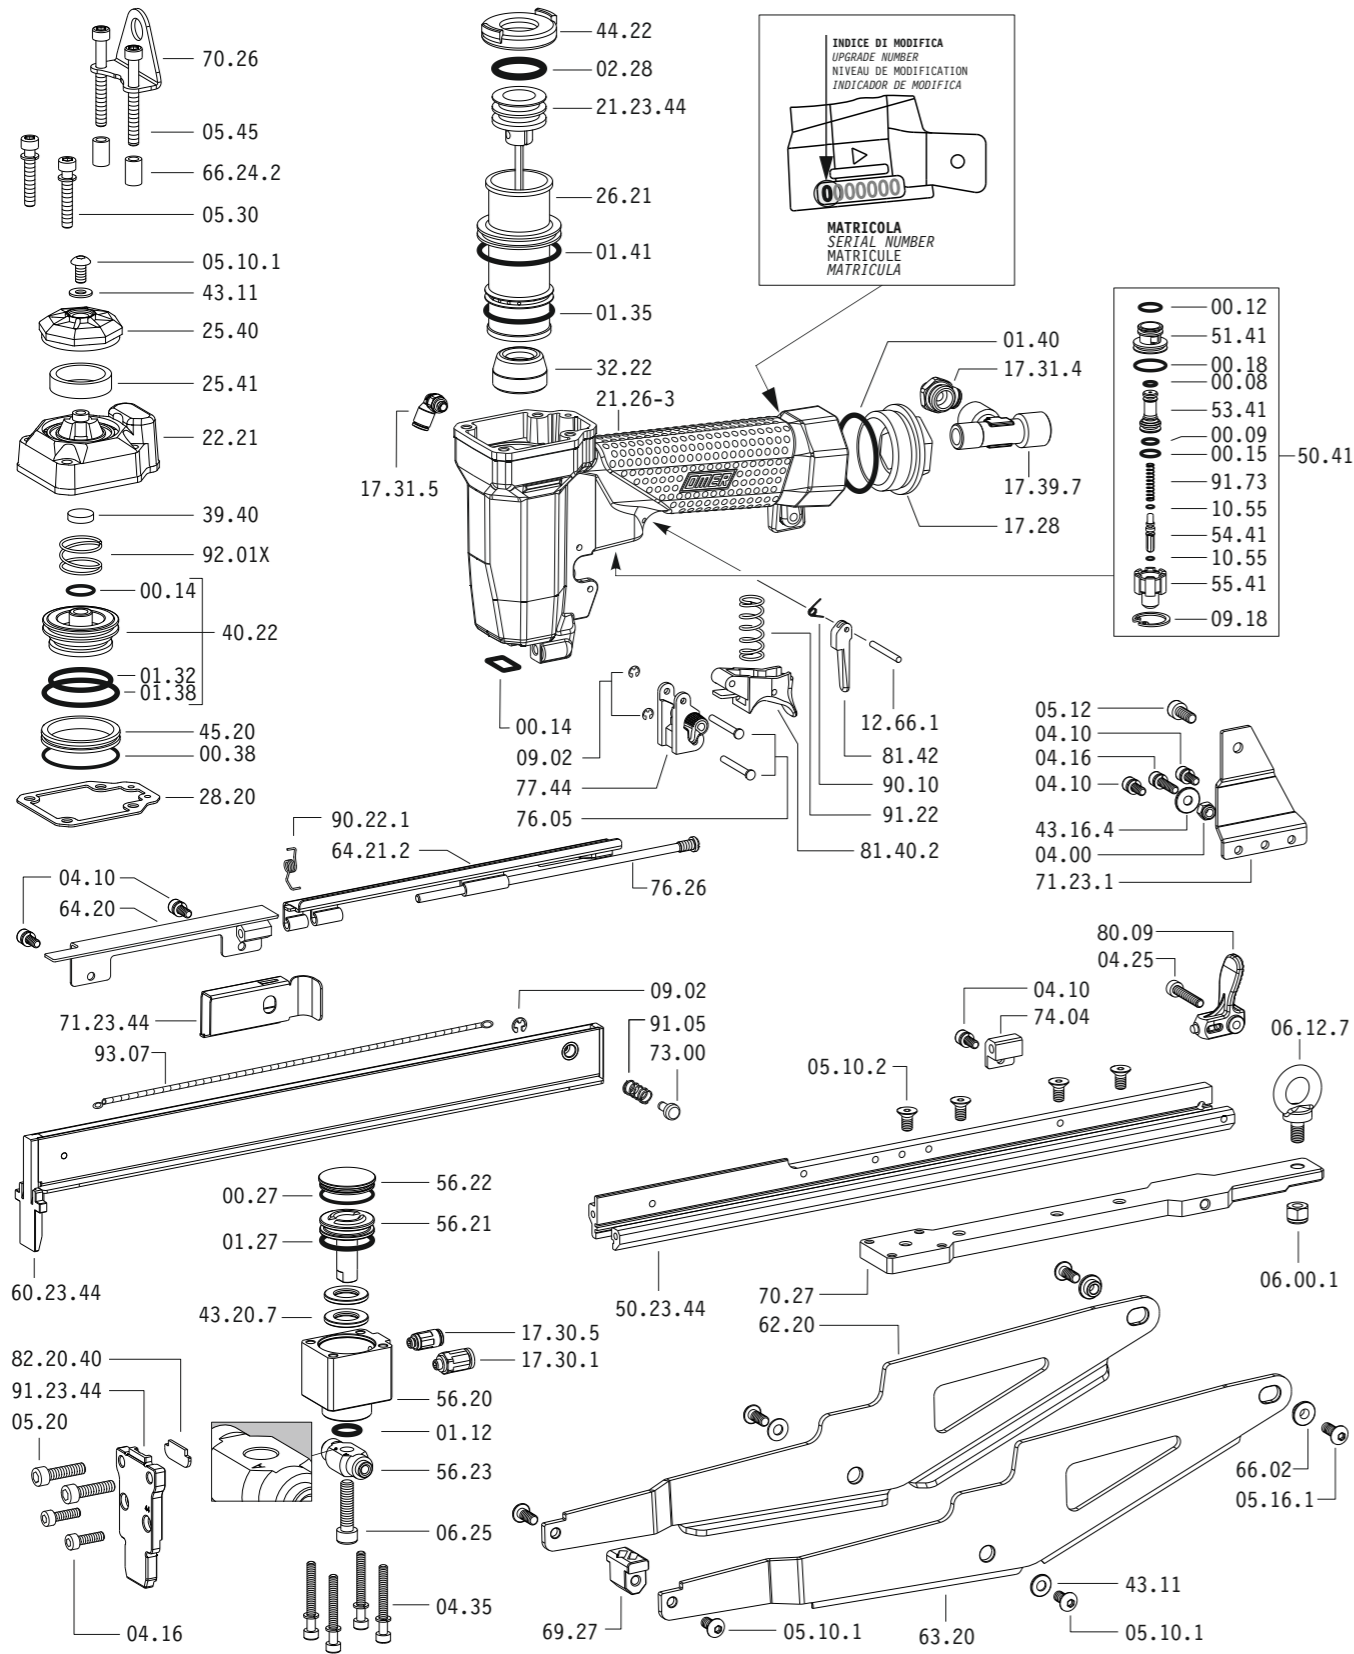

Dotazioni - Equipment - Ausrüstung - Équipements - Equipamiento - Παρεχόμενα
Equipamento - Uitrusting - Udstyr

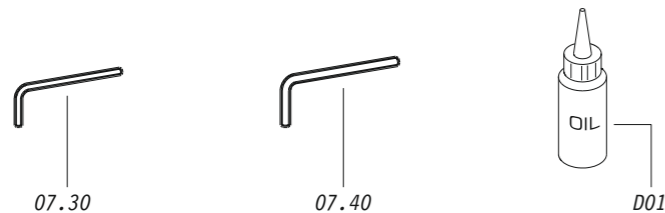


PL SG44 PJ

cod. 12378560

Parti di ricambio - Spare parts - Ersatzteile - Pièces de rechange - Piezas de repuesto
Ανταλλακτικά - Partes sobresselentes - Tabel te raadplegen - Reservedede

Cod.	Descrizione	Description
00.08	O-Ring	O-Ring
00.09	O-Ring	O-Ring
00.12	O-Ring	O-Ring
00.14	O-Ring	O-Ring
00.15	O-Ring	O-Ring
00.18	O-Ring	O-Ring
00.27	O-Ring	O-Ring
01.12	O-Ring	O-Ring
01.27	O-Ring	O-Ring
01.32	O-Ring	O-Ring
01.35	O-Ring	O-Ring
01.38	O-Ring	O-Ring
01.40	O-Ring	O-Ring
01.41	O-Ring	O-Ring
02.28	O-Ring	O-Ring
04.00	Dado	Nut
04.10	Vite	Screw
04.16	Vite	Screw
04.25	Vite	Screw
04.35	Vite	Screw
05.10.1	Vite	Screw
05.10.2	Vite	Screw
05.12	Vite	Screw
05.16.1	Vite	Screw
05.20	Vite	Screw
05.30	Vite	Screw
05.45	Vite	Screw
06.00.1	Dado	Nut
06.12.7	Vite con anello	Screw with ring
06.25	Vite	Screw
07.30	Chiave esagonale	Hex. bar wrench
07.40	Chiave esagonale	Hex. bar wrench
09.02	Anello elastico	Elastic ring
09.18	Anello elastico	Elastic ring
10.55	O-Ring	O-Ring
12.66.1	Spina	Pin
17.28	Tappo	Inlet cap
17.30.1	Raccordo Dritto	Straight Connection
17.30.5	Raccordo Dritto	Straight Connection
17.31.4	Raccordo L	L Connection
17.31.5	Raccordo L	L Connection
17.39.7	Raccordo T	T Connection
21.26-3	Corpo	Body
22.21	Testa	Head
25.40	Deflettore	Exhaust deflector
25.41	Silenziatore	Silencer
26.21	Cilindro	Cylinder
28.20	Guarnizione testa	Head gasket
32.22	Ammortizzatore	Bumper
39.40	Guarnizione scarico	Exhaust seal
40.22	Valvola completa	Valve ass'y
43.11	Rondella	Washer
43.16.4	Rondella	Washer
43.20.7	Rondella	Washer
44.22	Guarnizione	Gasket
45.20	Anello valvola	Ring
50.41	Pulsante completo	Trigger valve ass'y
51.41	Boccola pulsante	Trigger valve housing
53.41	Pistone servovalvola	Valve piston
54.41	Pulsante	Trigger
55.41	Raccordo pulsante	Bush
56.20	Cilindro	Cylinder
56.21	Pistone	Piston
56.22	Tappo	Cap
56.23	Cerniera	Hinge
62.20	Ganascia SX	Left jaw
63.20	Ganascia DX	Right jaw
64.20	Carter	Hold Down
64.21.2	Carter Mobile	Movable Hold Down
66.02	Boccola	Bush
66.02	Boccola	Bush
66.24.2	Distanziale	Spacer
69.27	Ribaditore	Anvil
70.26	Supporto	Support
70.27	Supporto	Support
71.23.1	Reggicaricatore	Support
73.00	Perno	Pin
74.04	Staffa	Stirrup
76.05	Perno	Pin
76.26	Perno carter	Pin
77.44	Guida sicura	Safety guide
80.09	Grilletto chiusura	Trigger
81.40.2	Grilletto	Trigger
81.42	Controgrilletto	Safety trigger
90.10	Molla	Spring
90.22.1	Molla	Spring
91.05	Molla	Spring
91.22	Molla	Spring
91.73	Molla	Spring
92.01X	Molla	Spring
93.07	Molla	Spring
21.23.44	Battente	Driver
50.23.44	Caricatore	Magazine
60.23.44	Carrello	Slider
71.23.44	Spingipunto	Pusher
82.20.40	Controtestina	Nose
91.23.44	Testina	Nose plate
D01	Boccetta olio	Oiler

Guarnizioni - O-Rings - Dichtungen - Joints - Kit O-Rings - Λαστιχάκια - Kit O-Rings - Pakninger

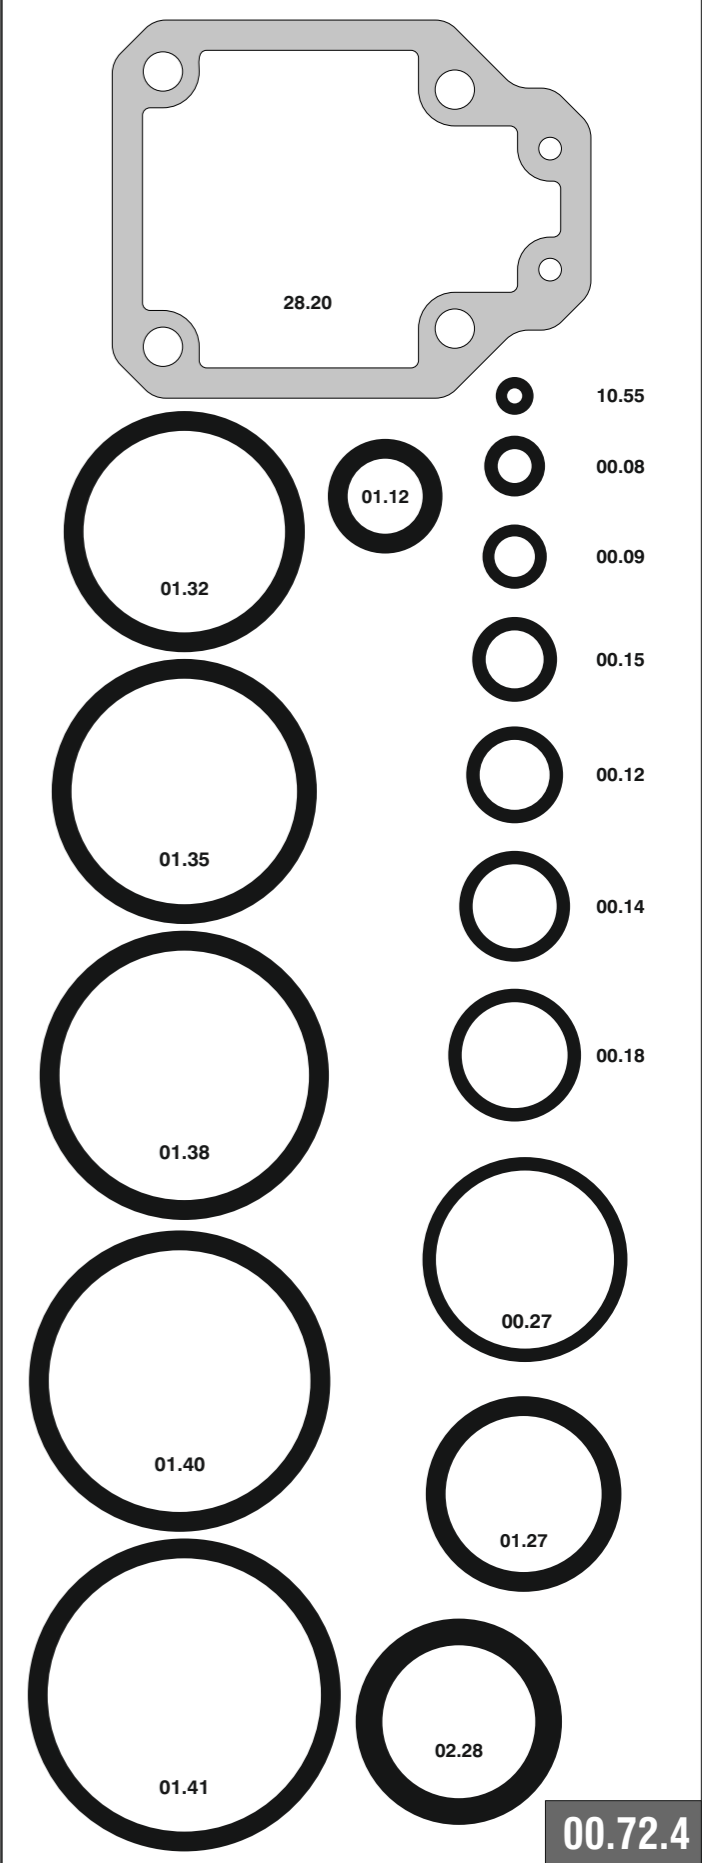

12378560_PL SG44 PJ_3 280417 IV

PL SG44 PJ

cod. 12378560

Indice di modifica
Upgrade number

3

3390960