
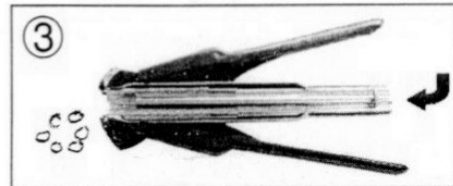
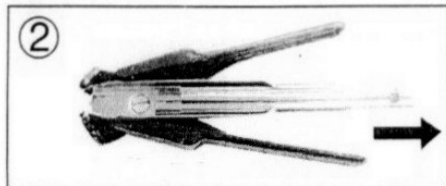


HOW TO LOAD:

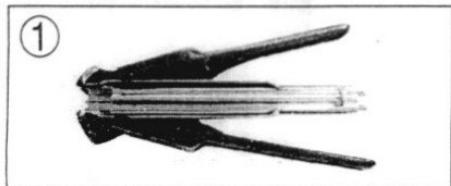

INSTRUCTIONS:

USE C-RING STAPLES.(OPEN 11/16", CLOSED 9/32")

AVAILABLE AS:

616G50, SR8, R8 RINGS

STAPLE CAPACITY:50 PCS(ONE STRIP)

LOADING:

Hold plier upside-down (magazine upwards).
Depress Core Latch Release, G710, with thumb.
Core Latch, G705, will release. Trapping the
Released Core Latch with forefinger, slide entire
Inner magazine assembly backwards to open.
Insert correct C-ring staples and push Core Latch
Release with thumb, until Core Latch engages to
close. **(refer to above pictures)**

SPARE PARTS CHARTS:

